




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

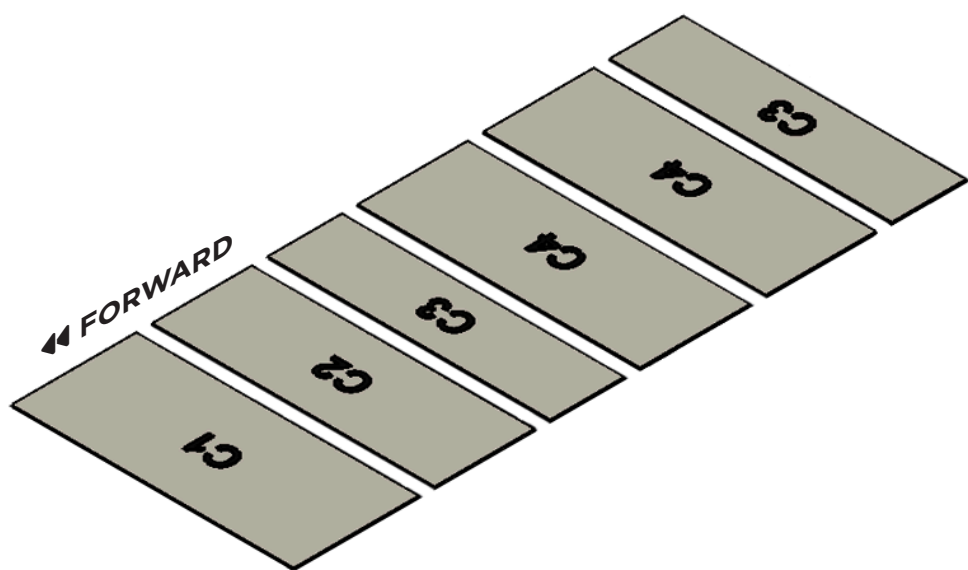

## VIEW FROM ABOVE VEHICLE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above. Parts with lower numbers are positioned toward the front of the vehicle.

# MERCEDES-BENZ SPRINTER

144 High Roof / Low Roof  
Ceiling Only

Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBER

3301-1

### INSULATION RATING

R4: 1-inch thick insulating material

### CONTENTS

Ceiling, 6 pieces.

### Installation Tip

- For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



[www.autoply.net](http://www.autoply.net)



+1 (954) 799-3035



[info@autoply.net](mailto:info@autoply.net)