


- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

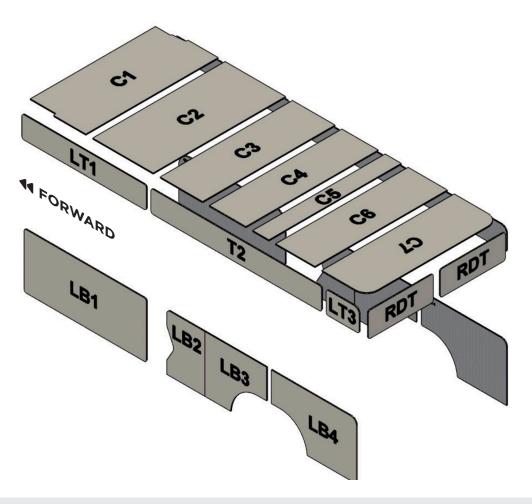

## **LEFT (DRIVER) SIDE**

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling **M** = mid-section **L** = left side

**R** = right side

**B** = bottom

**RD** = rear door

## **RAM PROMASTER**

159 High Roof Extended Window

Model years: 2016 - present

## **PRE-CUT INSULATION KIT** WITH SELF-ADHESIVE

### **KIT PART NUMBERS**

4000WX, 4000WX-1

#### **CONTENTS**

Ceiling, sides and doors. 23 pieces.

### i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



+1 (954) 799-3035

**Info**@autoply.net





# **RAM PROMASTER**

159 High Roof Extended Window

Model years: 2016 - present


### **PRE-CUT INSULATION KIT** WITH SELF-ADHESIVE

### **KIT PART NUMBERS**

4000WX, 4000WX-1

#### **CONTENTS**

Ceiling, sides and doors. 23 pieces.

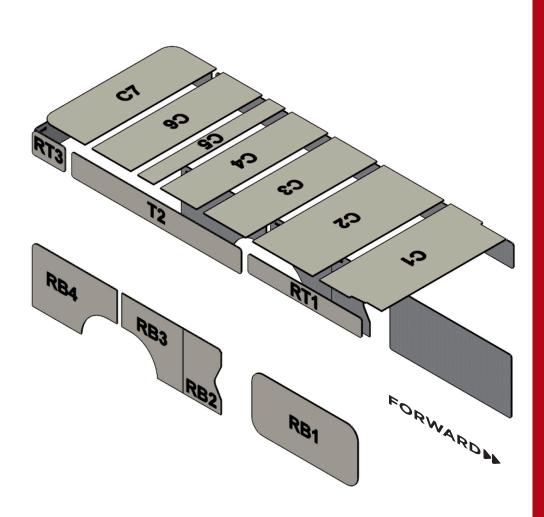

## **RIGHT (PASSENGER) SIDE**

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling

L = left side

R = right side

**M** = mid-section

B = bottom

**RD** = rear door

**m** www.autoply.net

+1 (954) 799-3035

**Info@autoply.net**