




AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

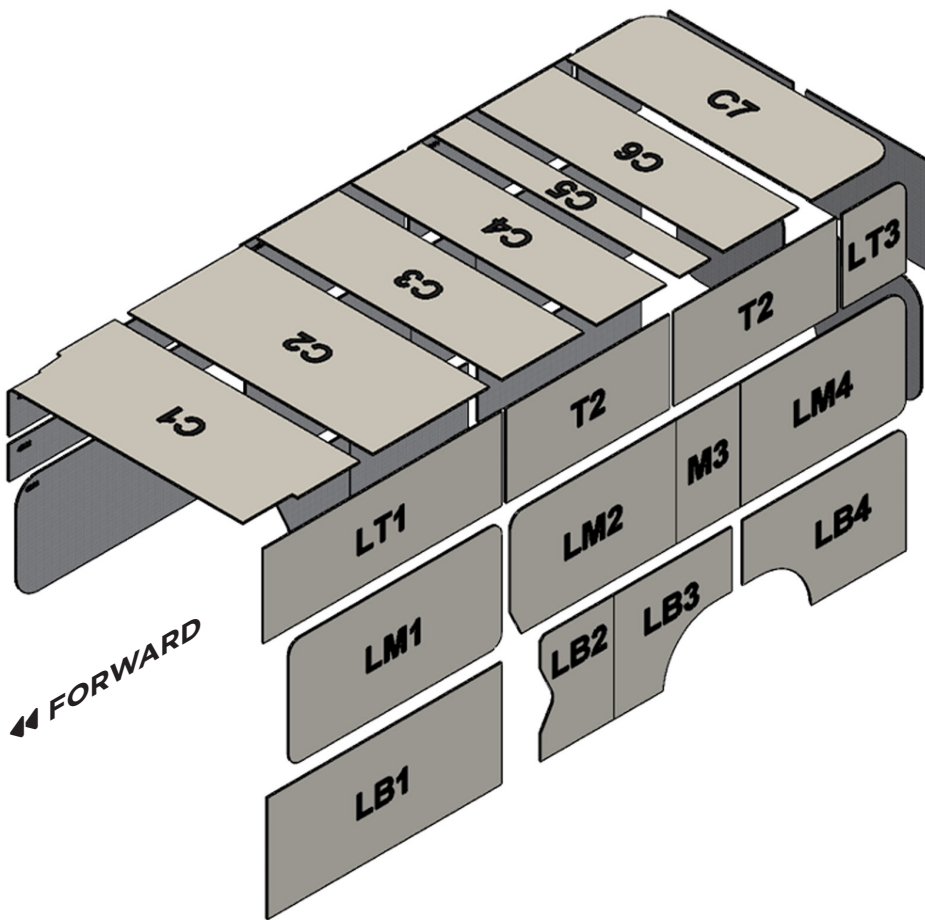

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling

L = left side

R = right side

M = mid-section

B = bottom

RD = rear door

RAM PROMASTER

159 Super High Roof

Model years: 2023 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

4000XSH, 4000XSH-1

CONTENTS

Ceiling, sides and doors.
35 pieces.

Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net



AUTOPLY
AUTOMOTIVE INSULATION KITS



RAM PROMASTER

159 Super High Roof

Model years: 2023 - present


PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

4000XSH, 4000XSH-1

CONTENTS

Ceiling, sides and doors.
35 pieces.

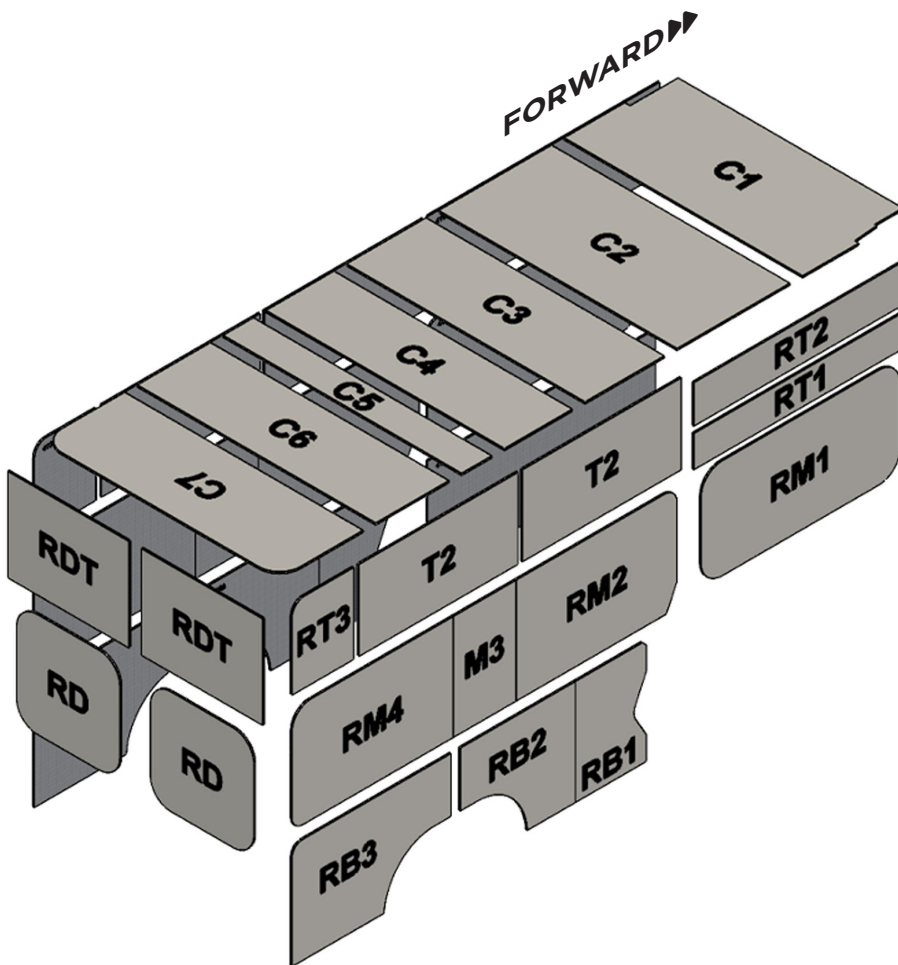

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling

L = left side

R = right side

M = mid-section

B = bottom

RD = rear door

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net