




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- › Part numbers are printed on adhesive release paper.
- › The release paper backing is pre-seamed for easy peel-and-stick application.
- › Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- › This product can withstand installed temperatures of -40°F to 250°F.

⚠ Upper side wall pieces LT1 and LT2 are not included with this kit.

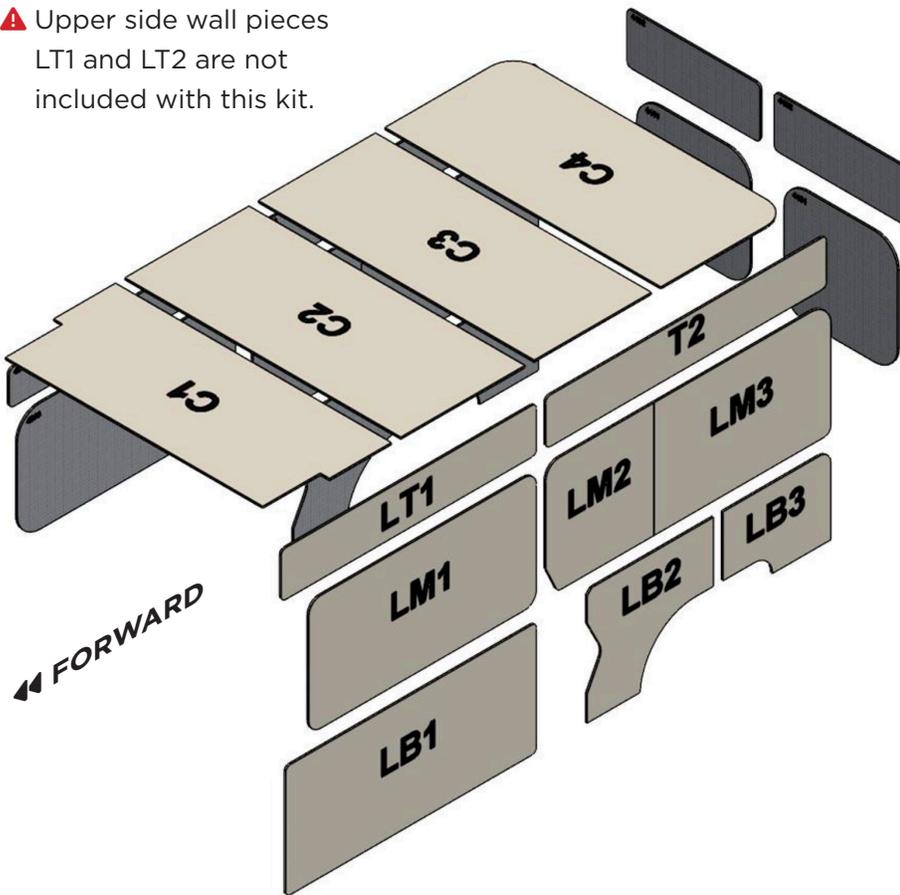

## LEFT (DRIVER) SIDE

**NOTE: Flip sheet over to view opposite side.**

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling      **L** = left side      **R** = right side  
**M** = mid-section      **B** = bottom      **RD** = rear door

# RAM PROMASTER

136 Low Roof

Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

4136L, 4136L-1

### CONTENTS

Ceiling, sides and doors.  
17 pieces.

### **i** Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

[www.autoply.net](http://www.autoply.net)

+1 (954) 799-3035

[info@autoply.net](mailto:info@autoply.net)



**AUTOPLY**  
AUTOMOTIVE INSULATION KITS



# RAM PROMASTER

136 Low Roof

Model years: 2016 - present


## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

4136L, 4136L-1

### CONTENTS

Ceiling, sides and doors.  
17 pieces.

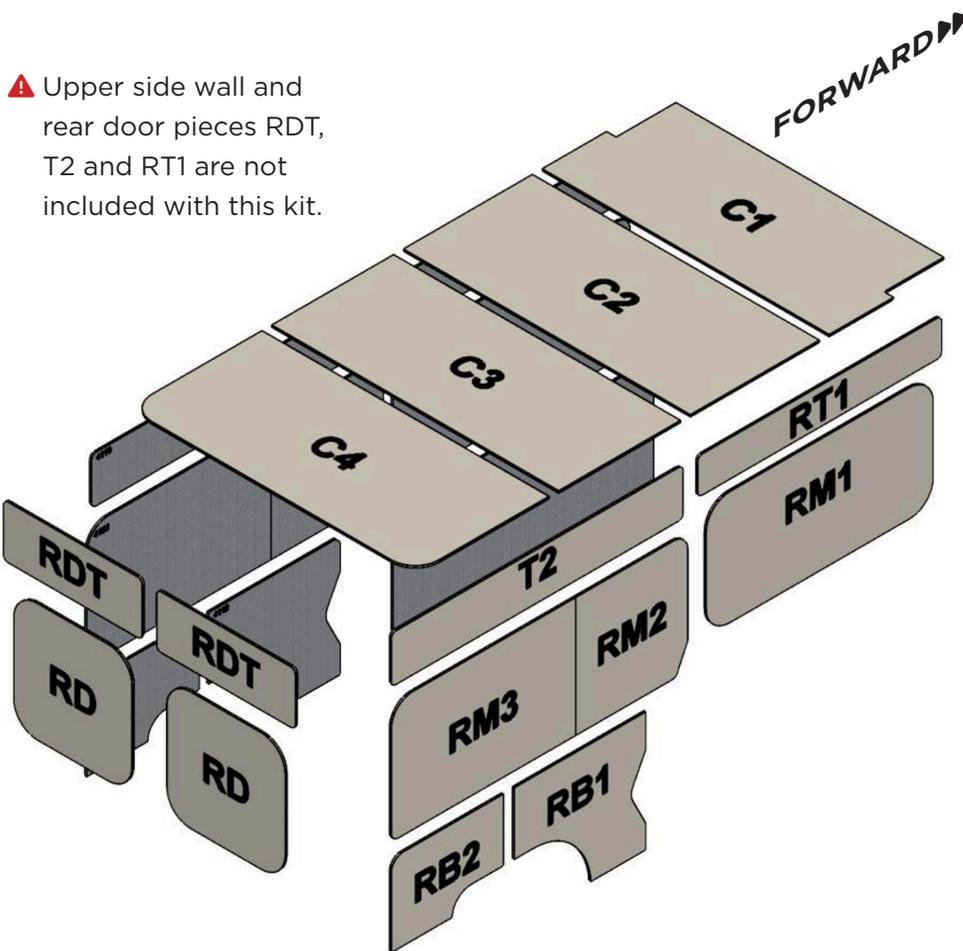

▲ Upper side wall and rear door pieces RDT, T2 and RT1 are not included with this kit.

## RIGHT (PASSENGER) SIDE

**NOTE:** Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling      **L** = left side      **R** = right side  
**M** = mid-section      **B** = bottom      **RD** = rear door

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)