




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

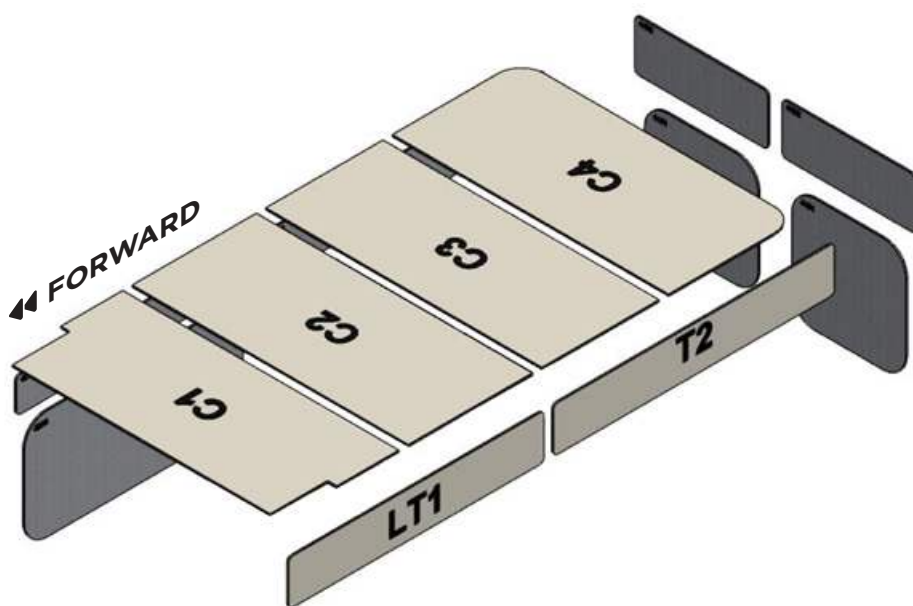

## LEFT (DRIVER) SIDE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above.

# RAM PROMASTER

136 High Roof  
Ceiling Plus

• For vehicles equipped with  
Mopar Side Paneling

Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBER

4301P-1

### INSULATION RATING

R4: 1-inch thick insulating material

### CONTENTS

Ceiling, upper sides, and doors.  
13 pieces.

### Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



[www.autoply.net](http://www.autoply.net)



+1 (954) 799-3035



[info@autoply.net](mailto:info@autoply.net)




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

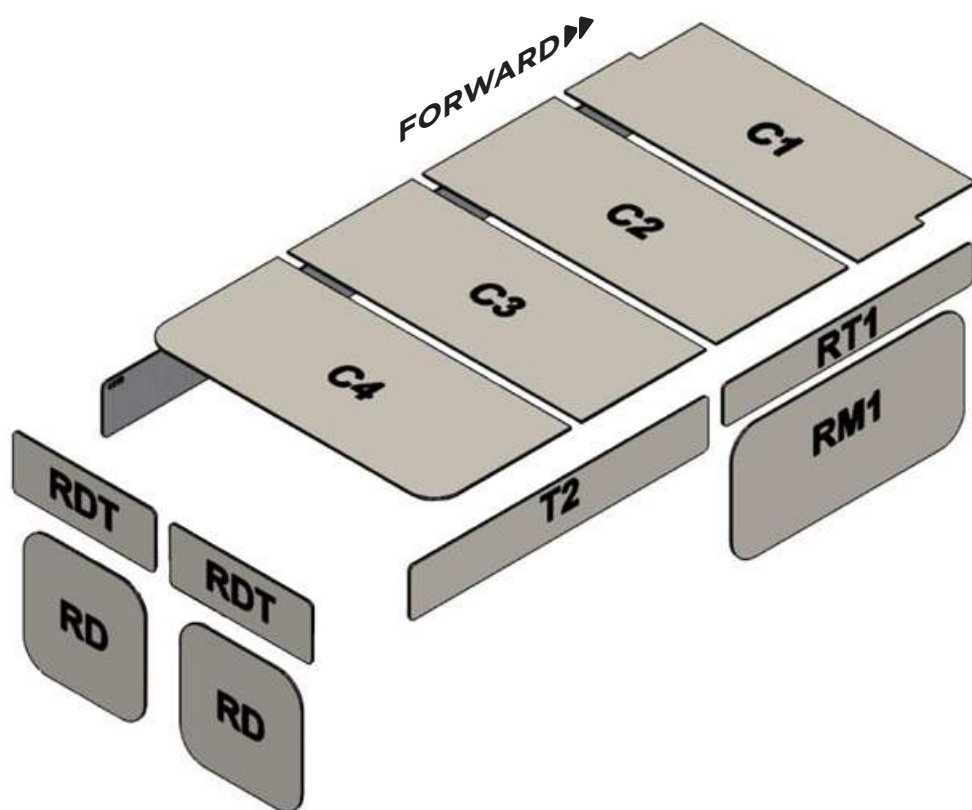

## RIGHT (PASSENGER) SIDE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above.

## RAM PROMASTER

136 High Roof  
Ceiling Plus

• For vehicles equipped with  
Mopar Side Paneling

Model years: 2016 - present

### PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

#### KIT PART NUMBER

4301P-1

#### INSULATION RATING

R4: 1-inch thick insulating material

#### CONTENTS

Ceiling, upper sides, and doors.  
13 pieces.

#### Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



[www.autoply.net](http://www.autoply.net)



+1 (954) 799-3035



[info@autoply.net](mailto:info@autoply.net)