




AUTOPLY

AUTOMOTIVE INSULATION KITS



- ▶ Part numbers are printed on adhesive release paper.
- ▶ The release paper backing is pre-seamed for easy peel-and-stick application.
- ▶ Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- ▶ This product can withstand installed temperatures of -40°F to 250°F.

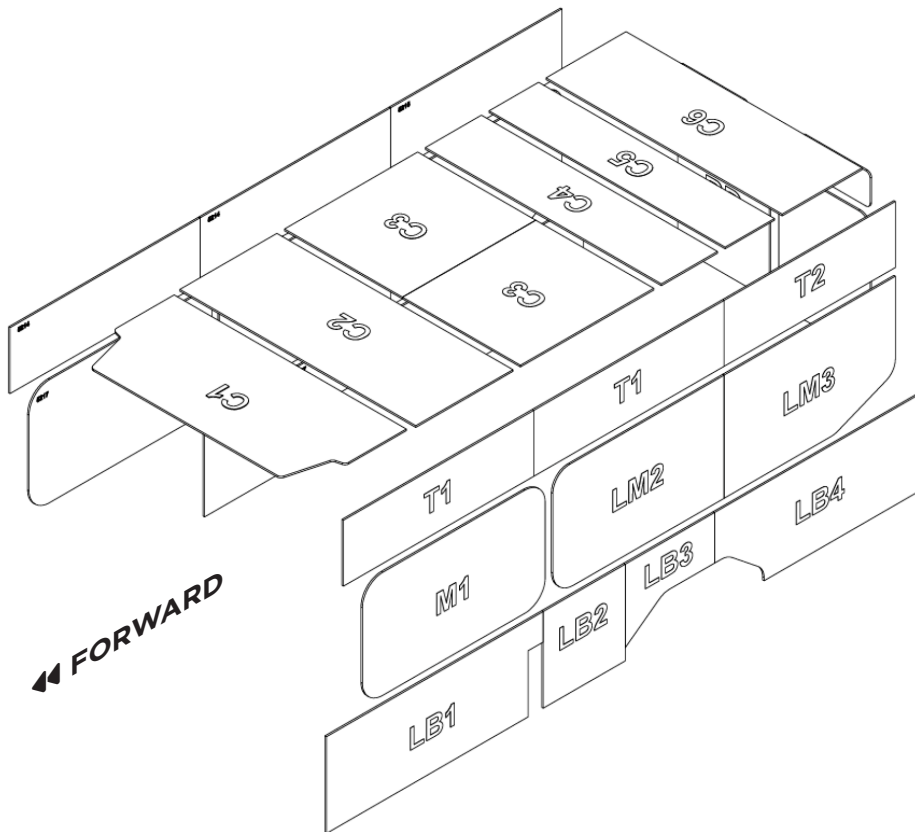

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling	L = left side	R = right side
M = mid-section	B = bottom	RD = rear door

FORD TRANSIT

148 High Roof Extra Long
Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

5000X, 5000X-1

CONTENTS

Ceiling, sides and doors.
30 pieces.

i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net



AUTOPLY
AUTOMOTIVE INSULATION KITS



FORD TRANSIT

148 High Roof Extra Long
Model years: 2016 - present


PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

5000X, 5000X-1

CONTENTS

Ceiling, sides and doors.
30 pieces.

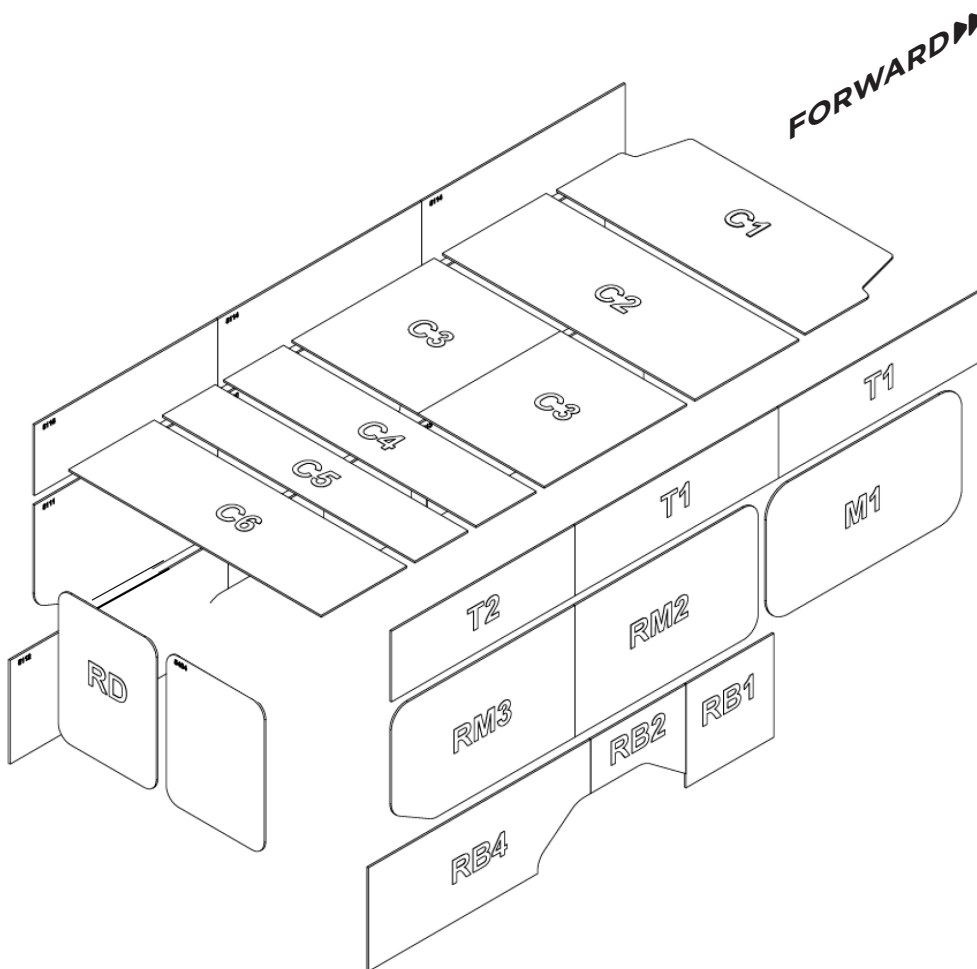

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling **L** = left side **R** = right side
M = mid-section **B** = bottom **RD** = rear door

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net