




**AUTOPLY**  
AUTOMOTIVE INSULATION KITS



- › Part numbers are printed on adhesive release paper.
- › The release paper backing is pre-seamed for easy peel-and-stick application.
- › Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- › This product can withstand installed temperatures of -40°F to 250°F.

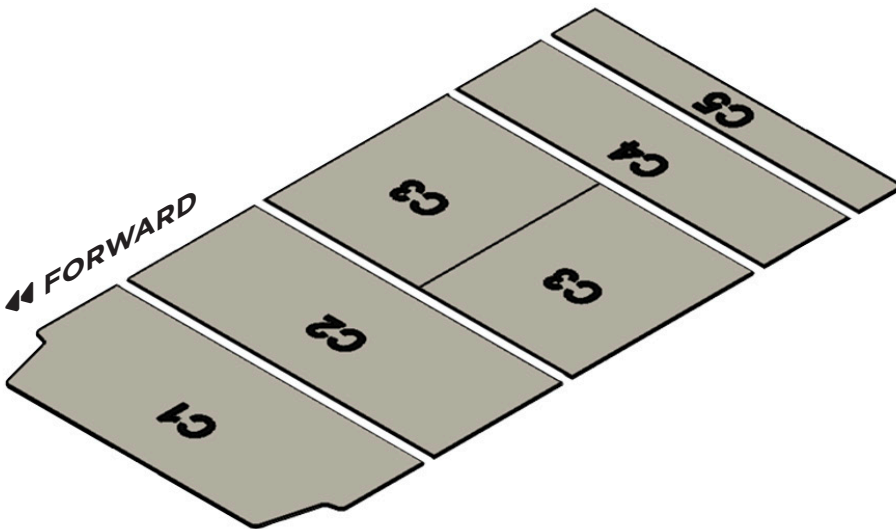

## VIEW FROM ABOVE VEHICLE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above. Parts with lower numbers are positioned toward the front of the vehicle.

# FORD TRANSIT

## 148 Medium Roof / Low Roof Ceiling Only

Model years: 2016 - present

### PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

#### KIT PART NUMBER

5300M-1

#### INSULATION RATING

R4: 1-inch thick insulating material

#### CONTENTS

Ceiling, 6 pieces.

#### **i** Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)