




AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

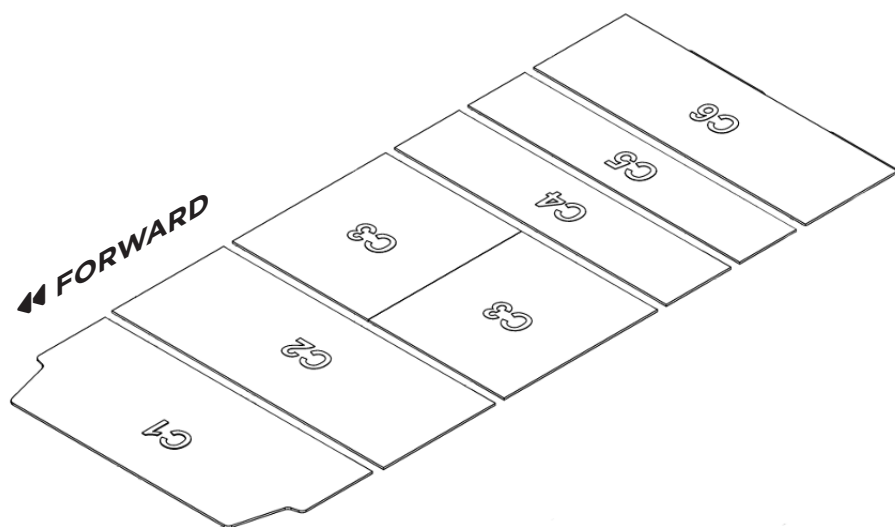

VIEW FROM ABOVE VEHICLE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above. Parts with lower numbers are positioned toward the front of the vehicle.

FORD TRANSIT

148 High Roof Extra Long
Ceiling Only

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBER

5300X-1

INSULATION RATING

R4: 1-inch thick insulating material

CONTENTS

Ceiling, 7 pieces.

i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



www.autoply.net



+1 (954) 799-3035



info@autoply.net