




**AUTOPLY**  
AUTOMOTIVE INSULATION KITS

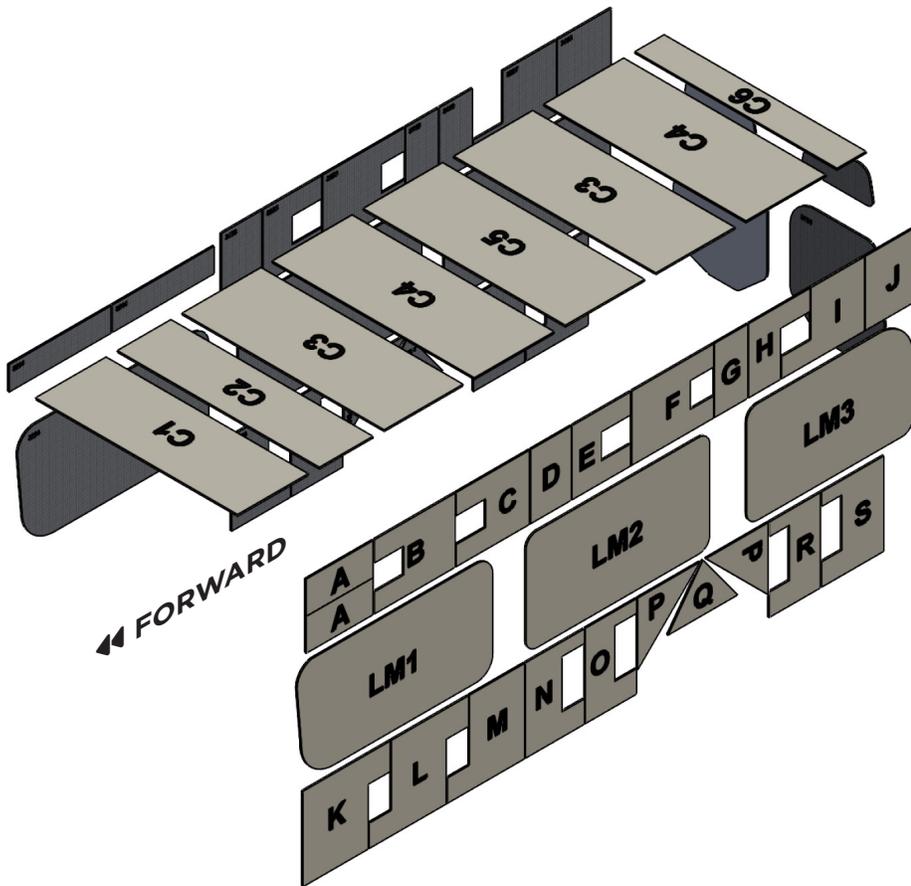

- ▶ Part numbers are printed on adhesive release paper.
- ▶ The release paper backing is pre-seamed for easy peel-and-stick application.
- ▶ Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- ▶ This product can withstand installed temperatures of -40°F to 250°F.



## LEFT (DRIVER) SIDE

**NOTE: Flip sheet over to view opposite side.**

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling                      **L** = left side                      **R** = right side  
**M** = mid-section                **B** = bottom                        **RD** = rear door

# MERCEDES-BENZ SPRINTER

170 High Roof

Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

3000V, 3000V-1

### CONTENTS

Ceiling, sides and doors.  
73 pieces.

**i Note:** Upper and lower wall pieces with rectangular cutouts fit behind and around wall structures. The rectangular cut-out shapes are included and can be tucked inside hollow wall structures for full insulation coverage. Some pieces will stay in place without need to remove adhesive release paper.

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)



**AUTOPLY**  
AUTOMOTIVE INSULATION KITS



# MERCEDES-BENZ SPRINTER

170 High Roof

Model years: 2016 - present


## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

3000V, 3000V-1

### CONTENTS

Ceiling, sides and doors.  
73 pieces.

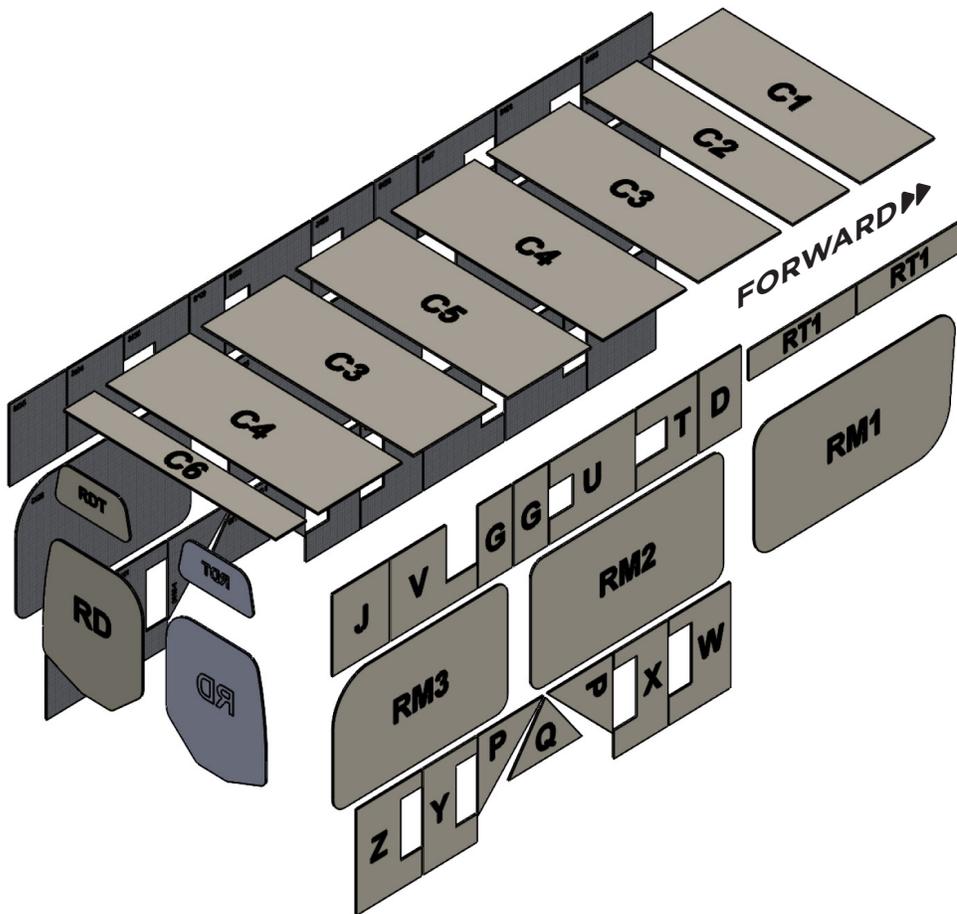

## RIGHT (PASSENGER) SIDE

**NOTE:** Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling      **L** = left side      **R** = right side  
**M** = mid-section      **B** = bottom      **RD** = rear door

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)