




AUTOPLY

AUTOMOTIVE INSULATION KITS



- ▶ Part numbers are printed on adhesive release paper.
- ▶ The release paper backing is pre-seamed for easy peel-and-stick application.
- ▶ Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- ▶ This product can withstand installed temperatures of -40°F to 250°F.

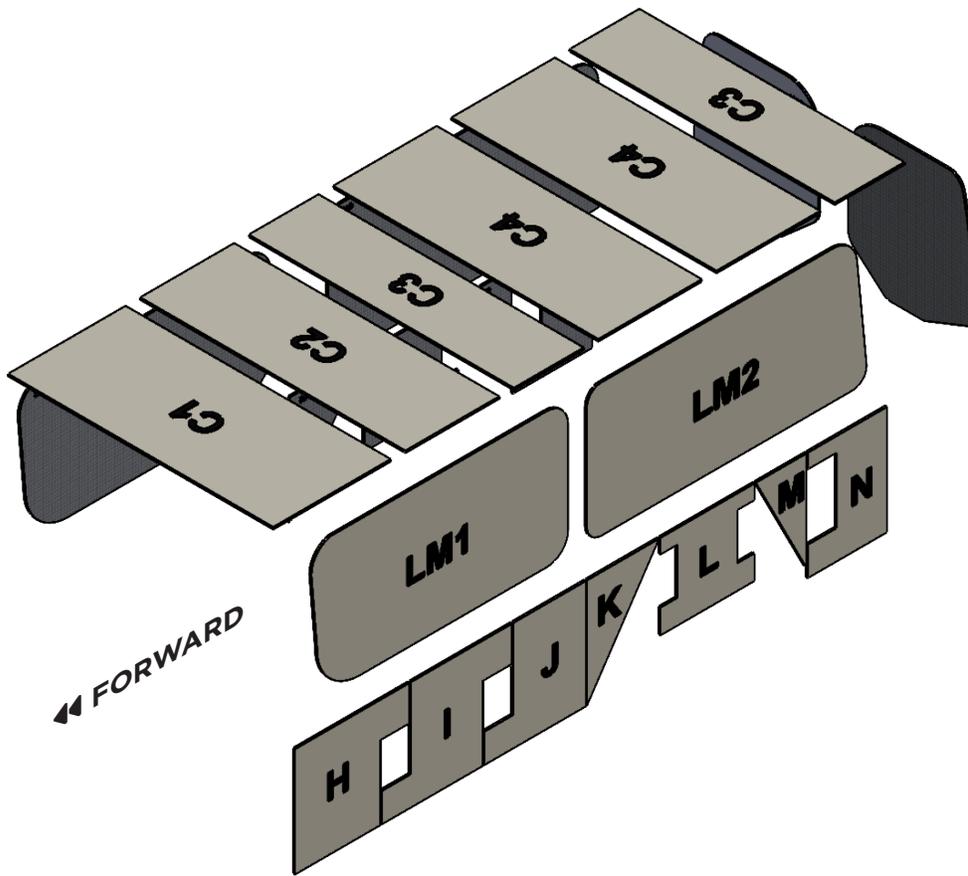

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling **L** = left side **R** = right side
M = mid-section **B** = bottom **RD** = rear door

MERCEDES-BENZ SPRINTER

144 Low Roof

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

3144VL, 3144VL-1

CONTENTS

Ceiling, sides and doors.
35 pieces.

i Note: Lower wall pieces with rectangular cutouts fit behind and around wall structures. The rectangular cut-out shapes are included and can be tucked inside hollow wall structures for full insulation coverage. Some pieces will stay in place without need to remove adhesive release paper.

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net



AUTOPLY
AUTOMOTIVE INSULATION KITS



MERCEDES-BENZ SPRINTER

144 Low Roof

Model years: 2016 - present


**PRE-CUT
INSULATION KIT
WITH SELF-ADHESIVE**

KIT PART NUMBERS

3144VL, 3144VL-1

CONTENTS

Ceiling, sides and doors.
35 pieces.

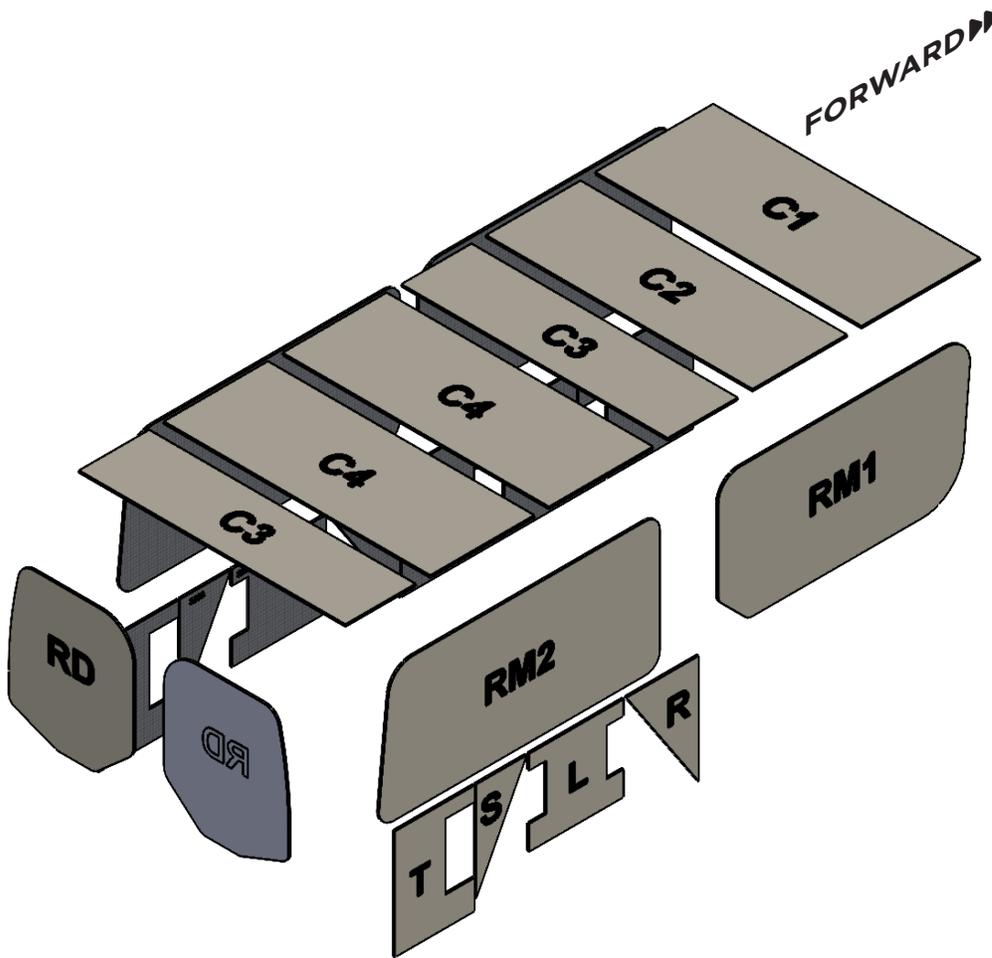

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceiling **L** = left side **R** = right side
M = mid-section **B** = bottom **RD** = rear door

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net