


MADE IN USA

- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- ▶ Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

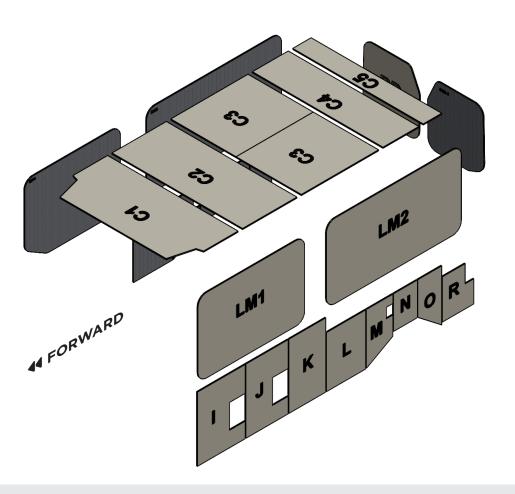

## **LEFT (DRIVER) SIDE**

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

**C** = ceiling **M** = mid-section **L** = left side

**R** = right side

on **B** = bottom

**RD** = rear door

## FORD TRANSIT

148 Low Roof

Model years: 2016 - present

# PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### **KIT PART NUMBERS**

5000VL, 5000VL-1

#### **CONTENTS**

Ceiling, sides and doors. 25 pieces.

pieces with rectangular cutouts fit behind and around wall structures. The rectangular cut-out shapes are included and can be tucked inside hollow wall structures for full insulation coverage. Some pieces will stay in place without need to remove adhesive release paper.

mww.autoply.net

+1 (954) 799-3035

**Info@autoply.net** 





## FORD TRANSIT

148 Low Roof

Model years: 2016 - present


# PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### **KIT PART NUMBERS**

5000VL, 5000VL-1

#### **CONTENTS**

Ceiling, sides and doors. 25 pieces.

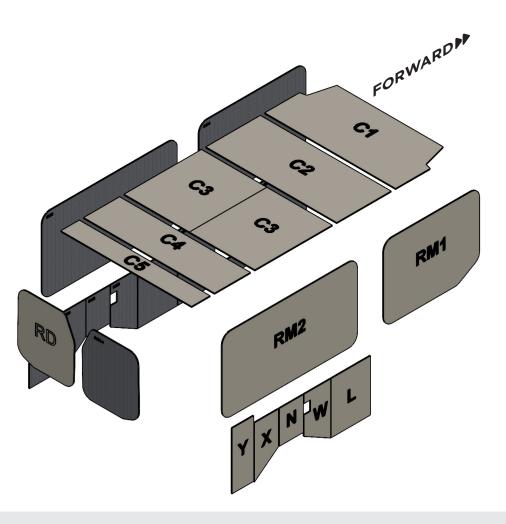

## **RIGHT (PASSENGER) SIDE**

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle. Parts with lower numbers are positioned toward the front of the vehicle.

C = ceilingM = mid-section

**L** = left side

**R** = right side

B = bottom

**RD** = rear door

**☆ www.autoply.net**

+1 (954) 799-3035

**Info@autoply.net**