




AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

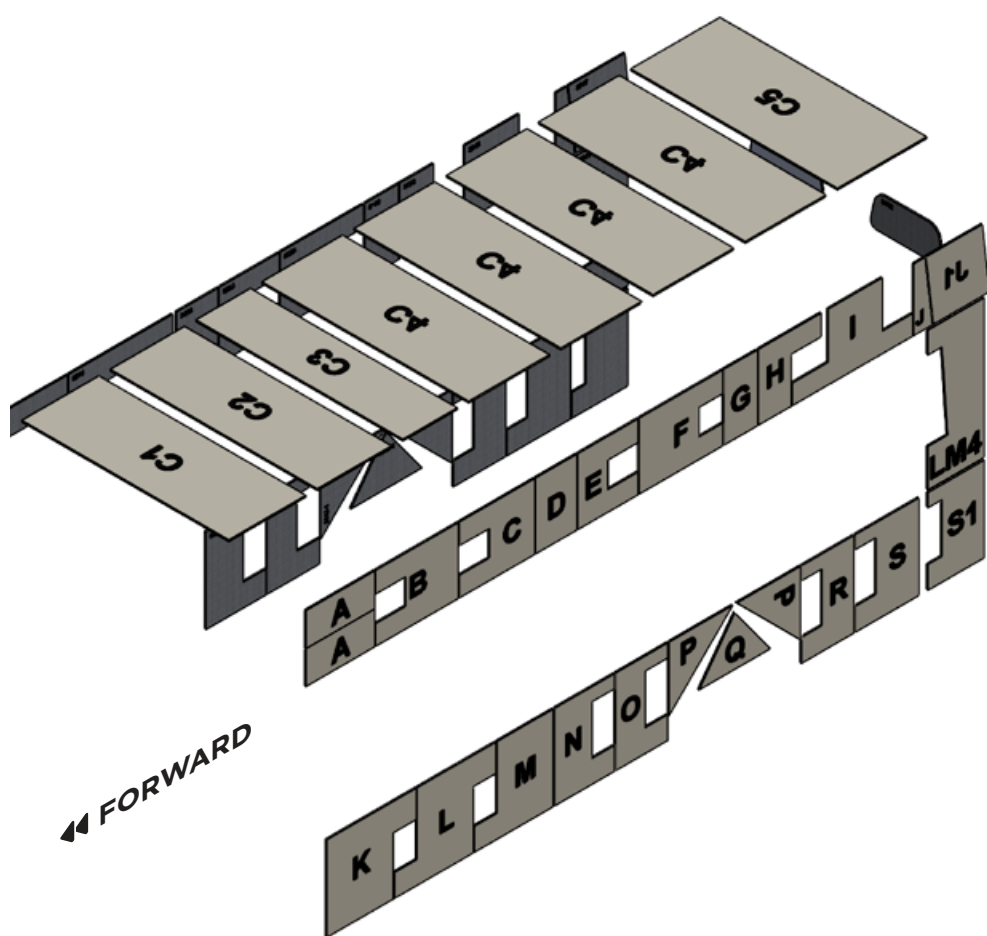

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling

L = left side

R = right side

M = mid-section

B = bottom

RD = rear door

MERCEDES-BENZ SPRINTER

170 High Roof Extended
Window Van

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

3000WVX, 3000WVX-1

CONTENTS

Ceiling, sides and doors.
37 pieces.

i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net



AUTOPLY
AUTOMOTIVE INSULATION KITS



MERCEDES-BENZ SPRINTER

170 High Roof Extended
Window Van

Model years: 2016 - present


PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

3000WVX, 3000WVX-1

CONTENTS

Ceiling, sides and doors.
37 pieces.

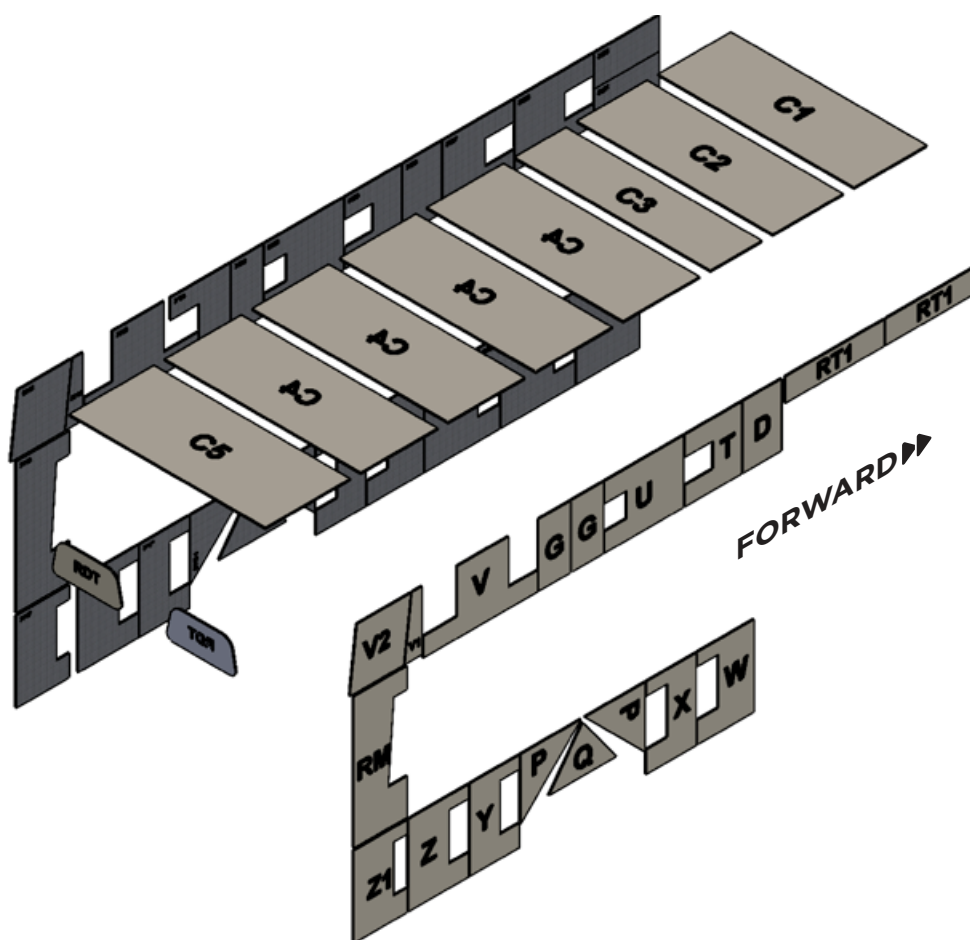

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling

L = left side

R = right side

M = mid-section

B = bottom

RD = rear door

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net