AUTOPLY
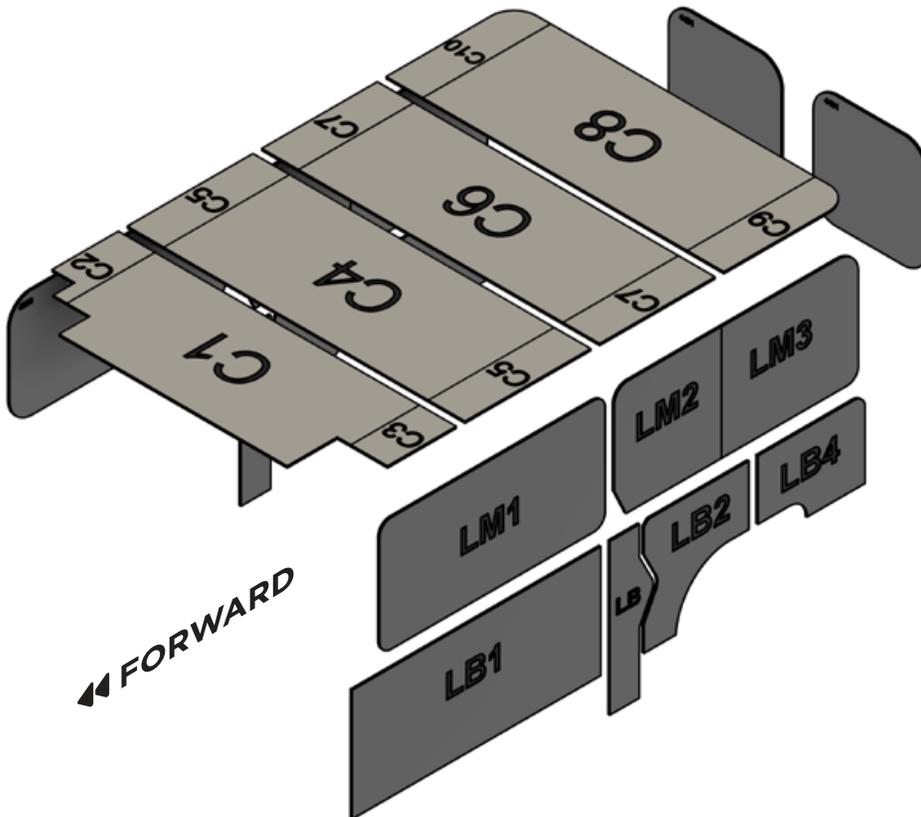## AUTOMOTIVE INSULATION KITS

- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

RAM PROMASTER
136 Low Roof
Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS
4136L, 4136L-1

CONTENTS
Ceiling, sides and doors.
27 pieces.

ℹ Installation Tip
For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

FORWARD

C10, C7, C9, C8, C6, C5, C4, C1, C2, C3, C5, C3
LM3, LM2, LM1, LB4, LB2, LB1, LB

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling   **L** = left side   **R** = right side
M = mid-section   **B** = bottom   **RD** = rear door

🖧 **www.autoply.net**
☎ **+1 (954) 799-3035**
✉ **info@autoply.net**

AUTOPLY
AUTOMOTIVE INSULATION KITS

RAM PROMASTER

136 Low Roof

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS
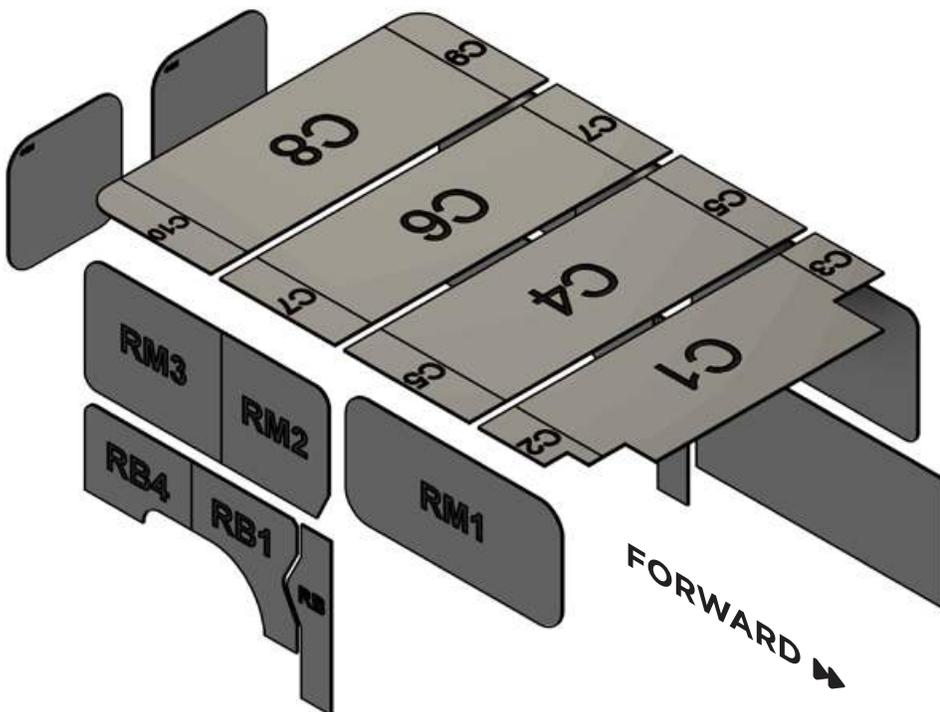
4136L, 4136L-1

CONTENTS

Ceiling, sides and doors.
27 pieces.

ⓘ Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

FORWARD

C8, C6, C4, C1, C7, C5, C3, C2, C10, C9, RM3, RM2, RM1, RB4, RB1, RB

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling
M = mid-section
L = left side
B = bottom
R = right side
RD = rear door