




AUTOPLY

AUTOMOTIVE INSULATION KITS



- › Part numbers are printed on adhesive release paper.
- › The release paper backing is pre-seamed for easy peel-and-stick application.
- › Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- › This product can withstand installed temperatures of -40°F to 250°F.

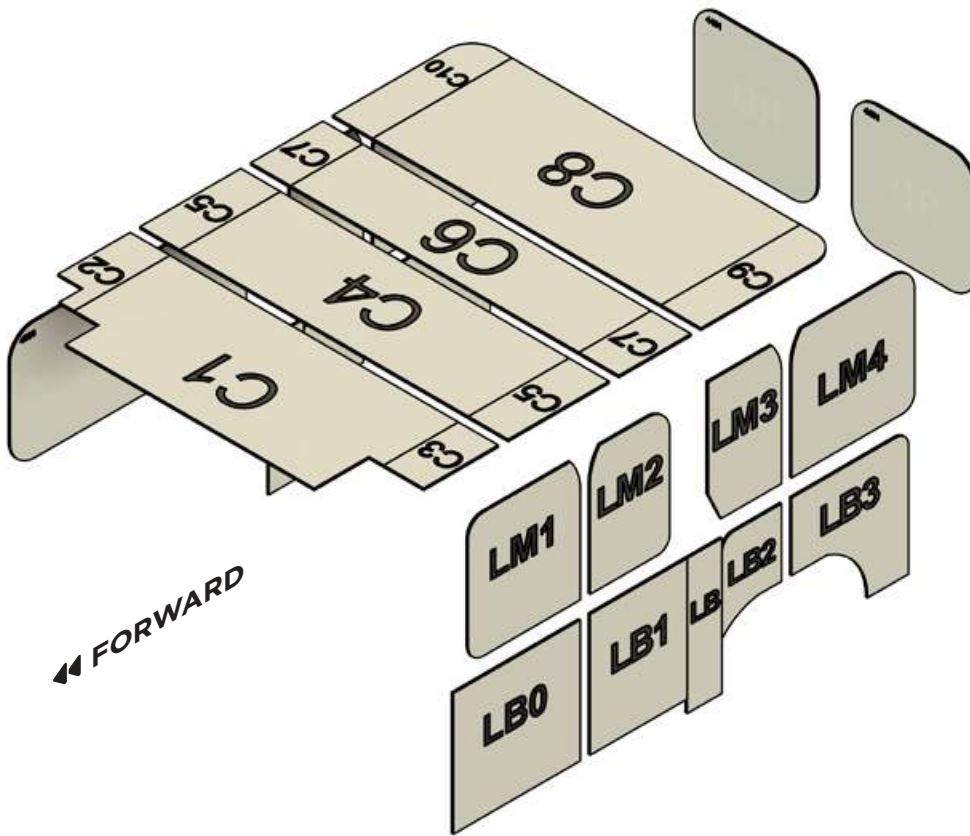

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling **L** = left side **R** = right side
M = mid-section **B** = bottom **RD** = rear door

RAM PROMASTER

118 Low Roof

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

4118L, 4118L-1, 4118L-1D

CONTENTS

Ceiling, sides and doors.
29 pieces.

i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

www.autoply.net

+1 (954) 799-3035

info@autoply.net



AUTOPLY
AUTOMOTIVE INSULATION KITS



RAM PROMASTER

118 Low Roof

Model years: 2016 - present


PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

4118L, 4118L-1, 4118L-1D

CONTENTS

Ceiling, sides and doors.
29 pieces.

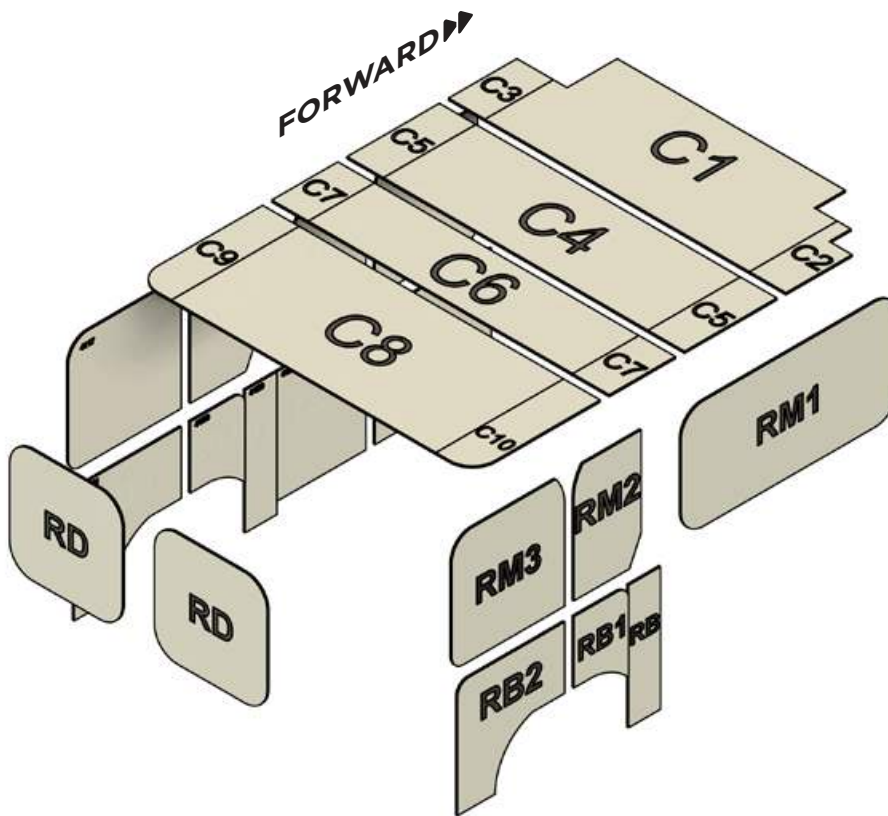

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling **L** = left side **R** = right side
M = mid-section **B** = bottom **RD** = rear door

 www.autoply.net

 +1 (954) 799-3035

 info@autoply.net