AUTOPLY
AUTOMOTIVE INSULATION KITS

MADE IN USA

- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

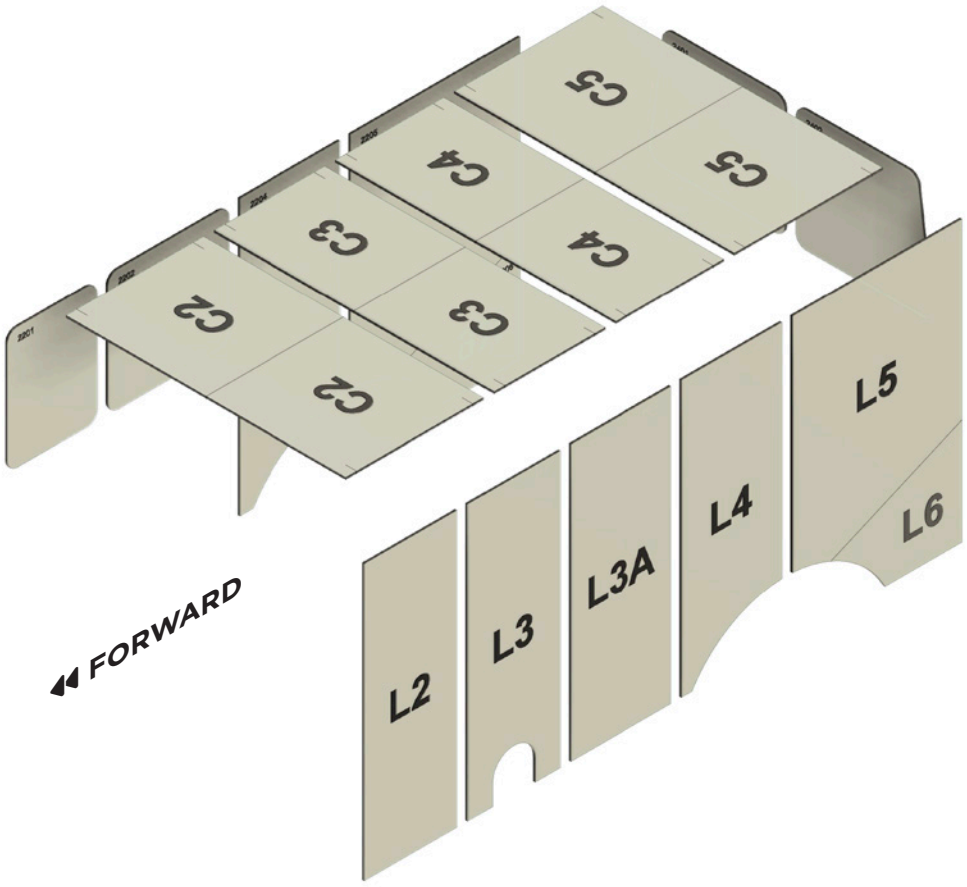

LEFT (DRIVER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling
M = mid-section
L = left side
B = bottom
R = right side
RD = rear door

CHEVY EXPRESS GMC SAVANA

135

Model years: 2003 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

2135, 2135-1, 2135-1D

CONTENTS

Ceiling, sides and doors.
21 pieces.

Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.

www.autoply.net
+1 (954) 799-3035
info@autoply.net

Guide 2135 – Rev. 20260623

AUTOPLY
AUTOMOTIVE INSULATION KITS

MADE IN USA

CHEVY EXPRESS GMC SAVANA

135

Model years: 2003 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBERS

2135, 2135-1, 2135-1D

CONTENTS

Ceiling, sides and doors.
21 pieces.

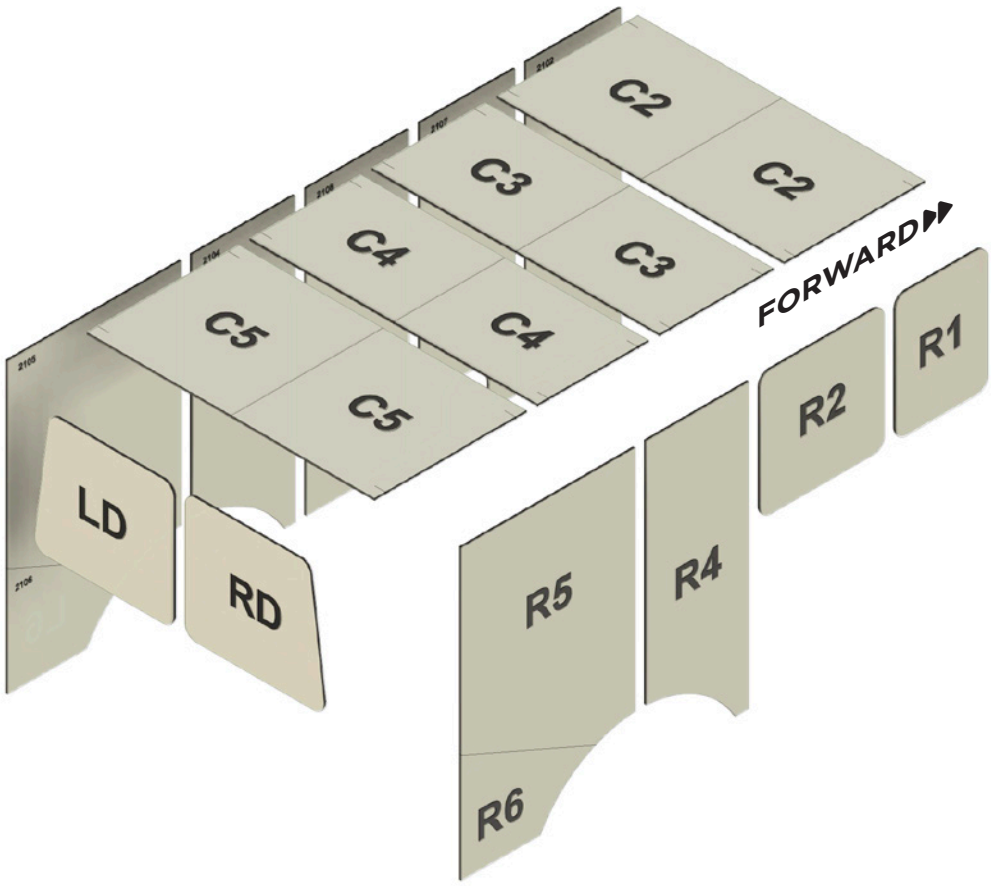

RIGHT (PASSENGER) SIDE

NOTE: Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

C = ceiling
M = mid-section
L = left side
B = bottom
R = right side
RD = rear door

www.autoply.net
+1 (954) 799-3035
info@autoply.net

Guide 2135 – Rev. 20260623